


REVISIONS					
ECN	REVISION	ZONE	DESCRIPTION OF CHANGE	APPROVED	DATE
337	NR	-	INITIAL RELEASE	<i>[Signature]</i>	12-14-2020

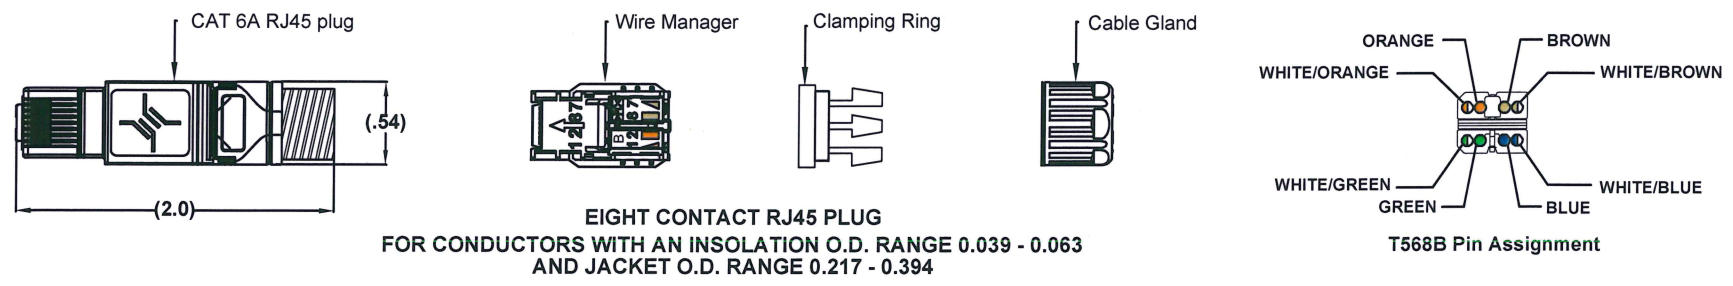


1) Slide the cable gland and clamping ring over the end of cable. Remove approximately 2 inches of cable jacket. Trim off rip cord.

2) Fold outer braid shield back over cable jacket and trim to 0.5 inches. Remove inner foil tape, white binder and X-web. Untwist pairs before inserting wires in to wire manager

3) Insert wires in to the wire manager matching the wire insulation colors with the colors on the wire manager. Use Knipex soft jaw pliers P/N 8603180 or equivalent to seat the the wires in to the wire carrier and the circuit board.

4) After the wires are seated in wire carrier trim excess wire and remove black protective cover.

5) Insert wire carrier in to RJ45 body, slide up the clamping ring and cable gland and tighten using the soft jaw pliers.

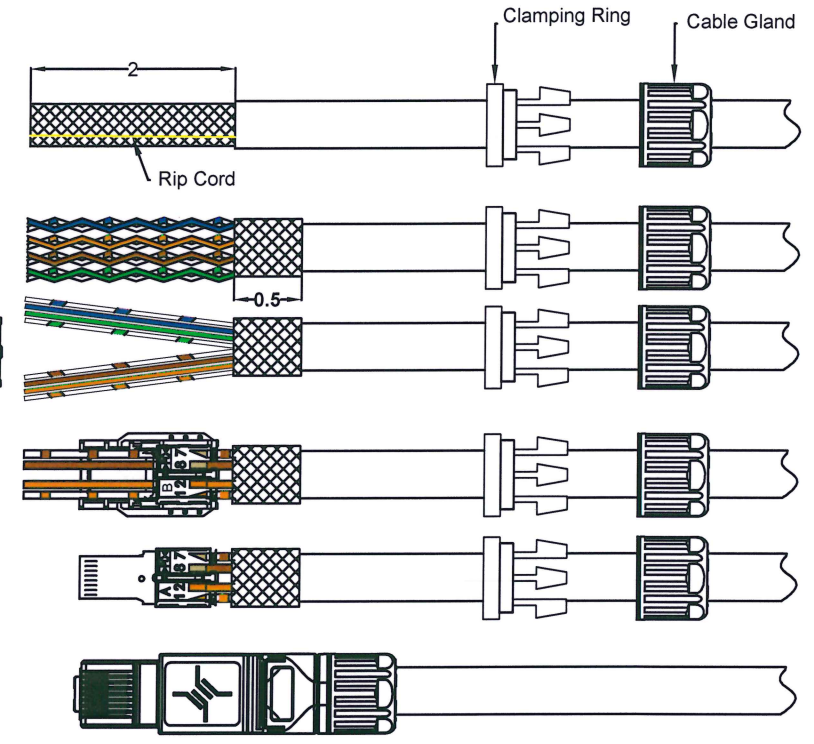

Contact	CAT 6a Cable
1	WHITE/ORANGE
2	ORANGE
3	WHITE/GREEN
4	BLUE
5	WHITE/BLUE
6	GREEN
7	WHITE/BROWN
8	BROWN

UNLESS OTHERWISE SPECIFIED:  
 ALL DIMENSIONS ARE IN INCHES.  
 ALL DIMENSIONS ARE FOR REFERENCE ONLY.

DESIGNED BY: C CHAPMAN	DATE: 12/11/2020	CHECKED BY: KORV/GRA	DATE: 12-14-2020	APPROVED BY: <i>[Signature]</i>	DATE: 12-14-2020
		DESCRIPTION: <b>TERMINATION INSTRUCTIONS FOR T568B SHIELDED CAT 6A PLUG</b>			
6180 Industrial Ct. Greendale WI, 53129 Tel: 414-488-6320 Fax: 414-433-9041		CAGE CODE: 8A8D5	PART NUMBER: GFSC-2021	SHEET: 1 OF 1	